



**1854598**


## **X-Princeton Console-EB**

### **Parts and Hardware List**

A.	Top Assembly	1 pc
B.	Stationary Shelf	1 pc
C.	Side Assemblies	2 pcs
D.	Glass Shelf	1 pc
E.	Allen Head Bolts	8 pcs
F.	Lock Washers	8 pcs
G.	Flat Washers	8 pcs
H.	Allen Head Wrench	1 pc
I.	Optional Allen Head Screwdriver Bit	1 pc

- \* Please make sure you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


### **Hardware Illustrations**

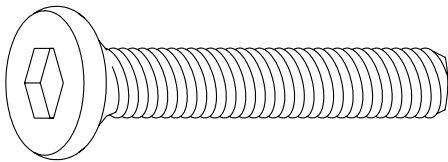

E. Allen Head Bolt



F. Lock Washer



G. Flat Washer


### **Assembly Instructions**



**1854598**

## **X-Princeton Console-EB**

1. **Attach Top Assembly (A)** Place the Top Assembly (A) upside down on a soft surface. Align the pre-drilled holes in the ends of Side Assemblies (C) with the pre-threaded holes in the Top Assembly (A). Make sure the pre-threaded holes in the bottom rails of Side Assemblies (C) faces inward. Secure, but do not tighten, with Allen Head Bolts (E), Lock Washers (F) and Flat Washers (G) using Allen Head Tool (H or I). See Illustration.
2. **Attach Stationary Shelf (B)** Align the pre-drilled holes in the ends of Stationary Shelf (B) with the pre-threaded holes in the bottom rails of Side Assemblies (C). Make sure the side with profile for Glass Shelf (D) faces down. Secure, but do not tighten with Allen Head Bolts (E), Lock Washers (F) and Flat Washers (G) using Allen Head Tool (H or I). See Illustration.
3. **Tighten all bolts this time.**
4. Put the item upright. Put the Glass Shelf (D) into the Stationary Shelf (B).

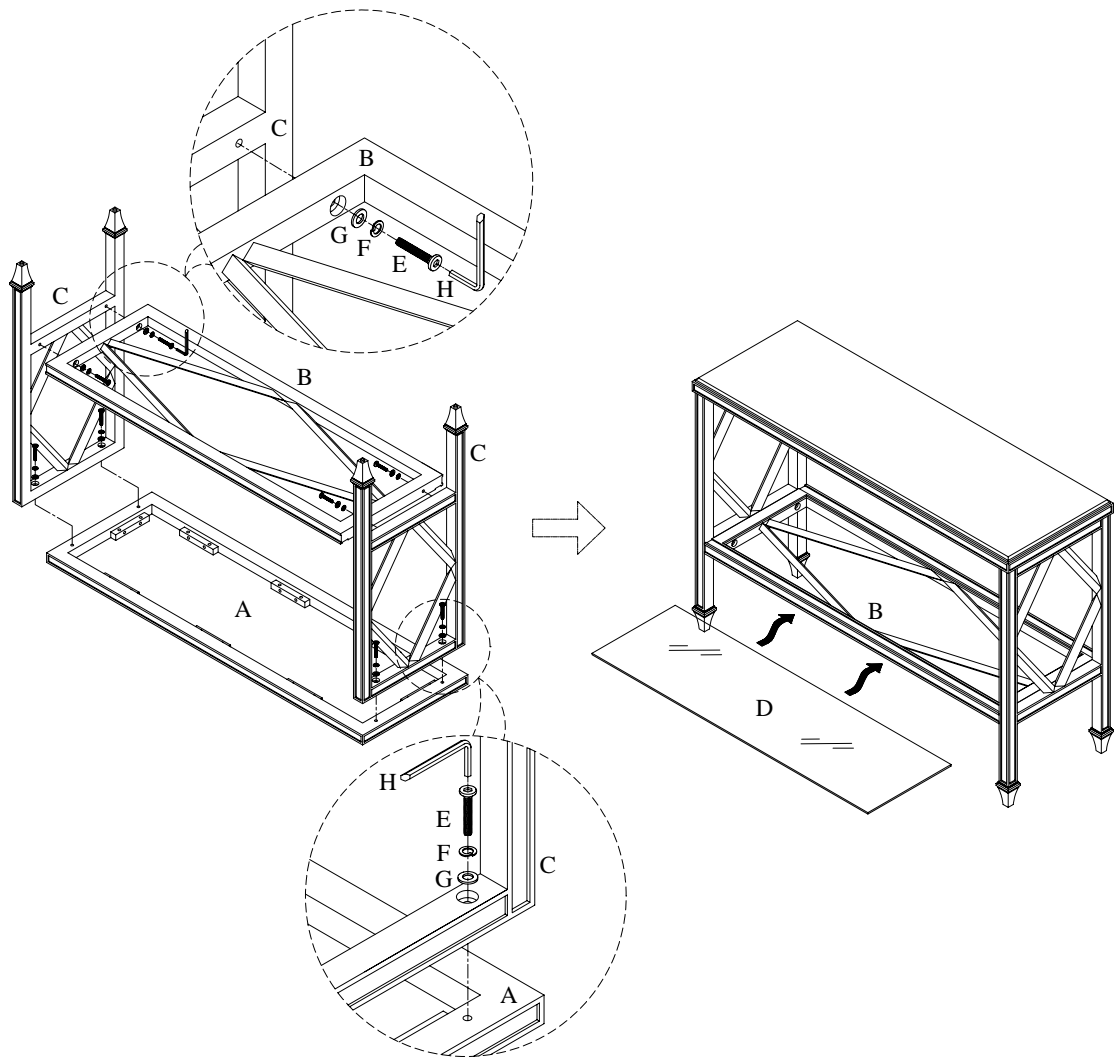

**Illustration**